



Open the side cover.

Remove the power cord and release 3 Allen screws


- Use an Hexagonal Allen key 2mm, it is provided with the accessories;

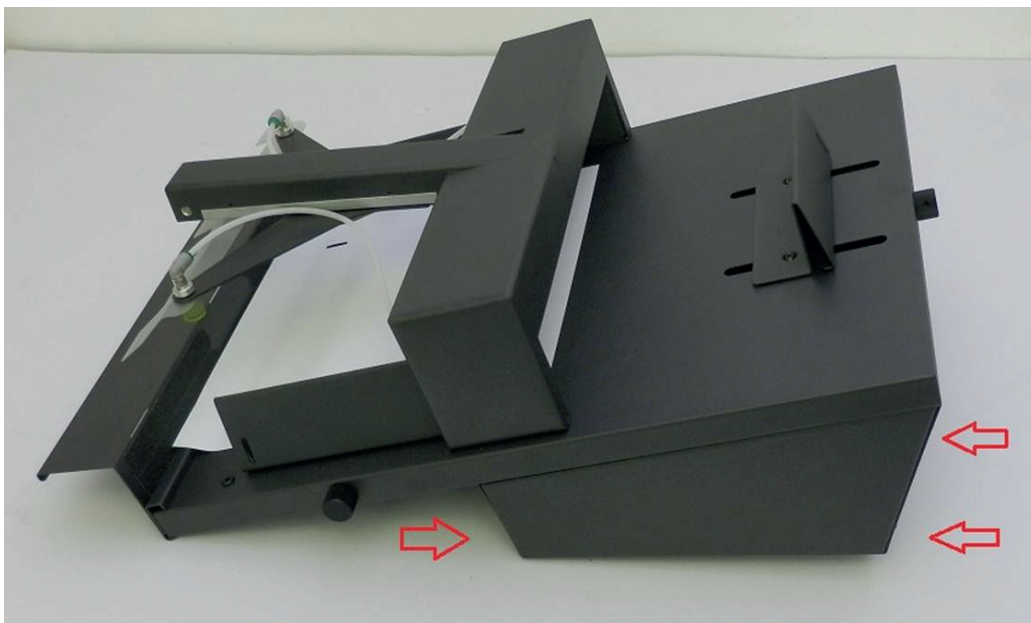

Use a screwdriver to help the opening of the side cover.

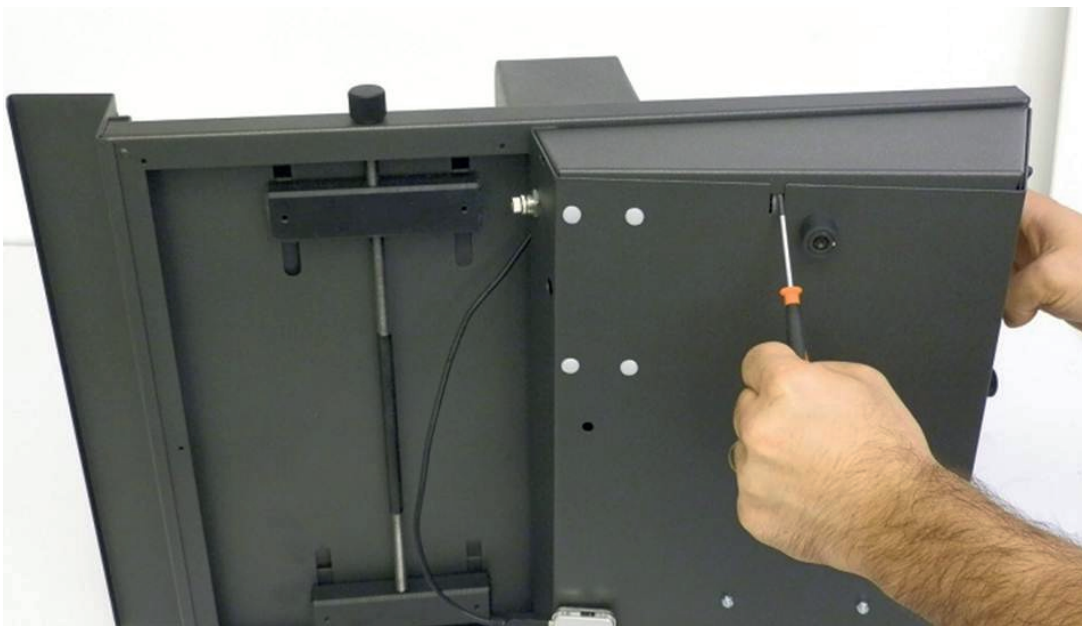


Update the firmware

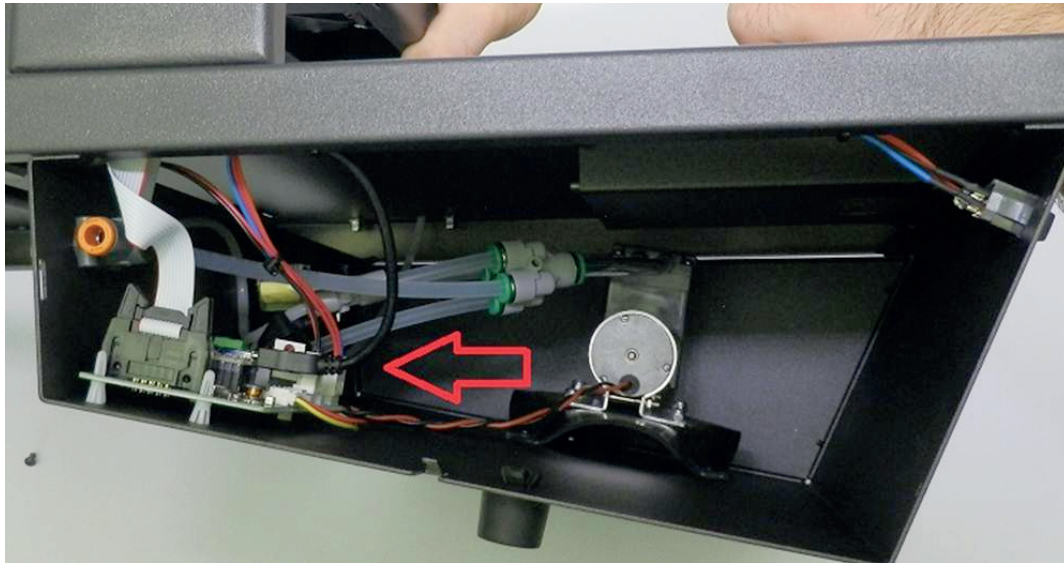

Locate the programmable usb board at the end of the USB cable.
Connect the power supply to the feeder.
Connect the USB cable of the feeder to the computer through the USB Hub.
Turn ON the feeder

Start the software LOADER.EXE provided.
Open the file 39h.hex
Press 'Operation' - 'Automatic mode'
The 'Auto' button must be GREEN.

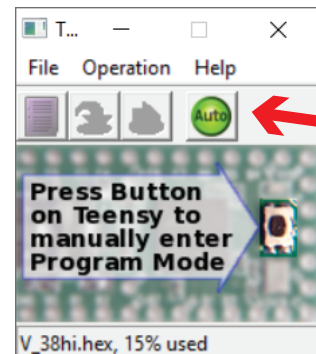

Press the reset button on the programmable USB board
The firmware should load and the system restart.

